


Stackable Chair Stacking Instructions




1. Position one chair above another chair, making sure that the rear legs of the top chair will be lowered directly in front of the rear legs of the chair below it.



2. Position the top chair back as far as it will go with the outside back of the top chair in contact with the inside back of the chair below it **BEFORE** the top chair is lowered into position and **BEFORE** any additional chairs are stacked.

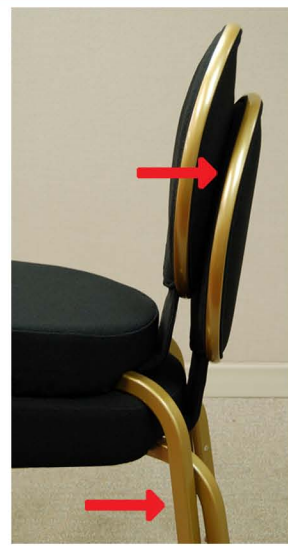

3. Slide the top chair down so that the seats make contact and the legs are positioned correctly as stated in #1.

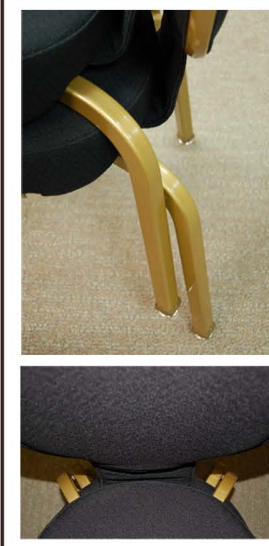

4. Align each seat with the seat of the chair below it, and not off to one side or the other. Continue stacking chairs in the same manner. Do not exceed the maximum number per stack.



Failure to follow the proper stacking instructions will void the Warranty and may result in damage to the chairs including, but not limited to:

- Excessive wear and tear on upholstery material, including tearing
- Bent or broken frames as a result of exceeding stacking limits
- Scratched or marred finish on frames

NOTE: Proper use of appropriate hand trucks to transport chairs is important. Using an incorrect style hand truck, or improper use of a hand truck may cause unwarrantable damage to the chairs.

If you have any questions regarding these instructions, please contact your sales representative, call Gasser Chair at 800.323.2234 or e-mail us at sales@gasserchair.com.



HT-22
For use with Standard Stack chairs.



HT-24
For use with KL Series chairs and chairs with Finger Grips.