


Glide Replacement on Non-Stackable Chairs

Tools needed: Vise grip pliers, Rubber mallet.

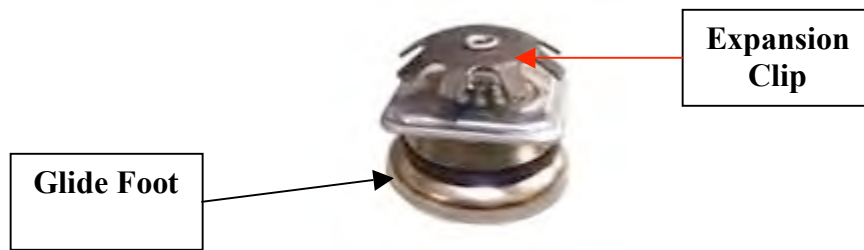

Non-Stackable Chair Glides for Carpeted Floors



Optional Nylon Cap for Non-Carpeted Floors



1) Turn chair over, placing the seat on a solid work surface. Grip glide to be removed with pliers. Remove glide from chair leg with an upward/forward motion.



2) Make sure the tubular leg is completely clear before attempting to insert new glide.

Note: Once glide has been removed, it cannot be reinstalled.



3) Align expansion clip of new glide with tubular leg and hold in place. Install glide by striking it firmly with a rubber or impact absorbing mallet until it is seated on chair leg.

Note: DO NOT USE A METAL HAMMER DIRECTLY ON GLIDE